

**NIDAC PRESCO**  
**PAC1 Door Controller**  
Program Procedures:

TO ADD A USER CODE

**Step 1.** Enter the Master Code or press the program button on the PAC1 door controller to enter the system into program mode.

**Step 2.** Press the Star Key, then enter a 3-digit location number (000 – 399).

**Step 3.** Enter the code type for door,

1 = momentary,      2 = toggle,      0 = disable

**Step 4.** Press Enter.

**Step 5.** Enter a 3-7 digit user code then press enter.

Program mode	*	Location No.	Dr1	Enter	Presco No.	Enter
--------------	---	--------------	-----	-------	------------	-------

Note:

1. the location does not already have an existing card programmed,
2. the User Card/Fob is not already being used in another location,
3. the Card/Fob number is not the same as the Master Code.

TO DELETE A USER CARD / KEYFOB

**Step 1.** Enter the Master Code or press the program button on the PAC1 door controller to enter the system into program mode.

**Step 2.** Press the Hash Key, then enter the 3-digit location number of the user to be deleted (000 – 399).

**Step 3.** Press Enter.

Program mode	#	Location No.	Enter
--------------	---	--------------	-------

Note: the Master code allows for one only successful or unsuccessful operation before reverting to the Operate Mode.